

HUCOL CONVERTERS

ROTARY CONVERTER - RT RANGE

INSTALLATION & OPERATING INSTRUCTIONS

Tel: NI 028 92662214 Rol 048 92662214 Mobile 0487714753982

Adequate overload protection for both the driven machinery and the supply circuit to the converter is the responsibility of the customer. The customer should also ensure that the electricity system and cable supplying the converter is of sufficient capacity to allow the motor to start without causing undue supply disturbances as a consequence of voltage drop. Protection to individual machinery is the responsibility of the customer.

The customer must ensure that the output neutral from the converter is not connected to the electricity provider's supply neutral or the supply neutral from a generator. The single phase supply neutral must be kept electrically separate from the converter output neutral to avoid damaging the converter.

1) Ensure that the details on the converter rating plate are compatible with the electricity supply system and the required motor loads.

NOTE

2) The incoming supply should be connected to the converter via an isolator and protection device (ie fuse or Type C "motor rated" circuit breaker). Recommended fuse ratings and cable sizes are indicated below. The output from the converter takes the form of an industrial-style three-phase neutral and earth socket (Notation: L1, L2, L3, N). All earth connections should be securely connected to a good earth point. Removal of either the socket or the terminal box (where applicable) will compromise any warranty offered by the manufactures.

ROTARY CONVERTER RATINGS CYCLIC LOAD			SINGLE PHASE SUPPLY VOLTAGE			
Minimum Load	Maximum Load Single Motor	Maximum Load Multi motor	220/240 VOLT		440/480 VOLT	
			Fuse Circuit Breaker	Cable	Fuse Circuit Breaker	Cable
No minimum	2.20kW/03.0hp	2.20kW/03.0hp	20A	2.5mm	N/A	N/A
No minimum	3.00kW/04.0hp	3.00kW/04.0hp	25A	4.0mm	N/A	N/A
No minimum	4.00kW/05.5hp	4.00kW/05.5hp	25A	4.0mm	N/A	N/A
No minimum	5.50kW/07.5hp	5.50kW/07.5hp	30A	4.0mm	N/A	N/A
No minimum	7.50kW/10.0hp	7.50kW/10.0hp	40A	6.0mm	20A	4.0mm
No minimum	11.0kW/15.0hp	11.0kW/15.0hp	60A	10.0mm	30A	6.0mm
No minimum	15.0kW/20.0hp	15.0kW/20.0hp	80A	16.0mm	40A	10.0mm
No minimum	18.5kW/25.0hp	22.0kW/30.0hp	120A	25.0mm	60A	16.0mm

*Minimum size for run of up to 20m. For longer cable runs see current edition of BS7671/AS 300 amendment 2.

3) The HUCOL converter incorporates a rotary transformer, which establishes the artificial three-phase output from the converter when energised.

4) Before any machinery is connected to the output of the converter, switch the converter on by using the on button located on the converter. The rotary transformer on the converter will automatically attain its full operating speed within a few seconds.

The initial surge required to start the motor is provided by the boost circuit of the converter. The "boost on" light indicates the circuit is energised. The circuit is controlled automatically from within the converter, switching on whenever a motor is starting against load and switching off once the motor has attained its full running speed. If the boost light does not go out within a few seconds the converter should be switched off to avoid the possibility of electrical damage to the rotary transformer. The reason for this condition should be checked and corrected before the converter is restarted.

5) Note that if voltages were checked at this point phase to phase readings would be similar to those

experienced on a mains three-phase supply. Note that the voltages do not relate to earth as they would on a mains three-phase supply. Switch the converter off and connect driven machines to the converter output socket.

Care should be taken with the connection of the machine to the output socket. If the machine has a contactor starter the 400/415v - control coil must be fed from the phases marked L1 and L2. If the control circuit is fed incorrectly (i.e. connected to the phase marked L3) the contactor could chatter when operating. Similarly, a control transformer and/or lighting transformer with a primary winding of 415v must be fed from L1 and L2 phases. Connection to the L3 phase could lead to premature aging of the control transformer.

The HUCOL rotary converter can accommodate both a 415v control circuit (as above) and a single phase 240v control circuit provided the L1 phase is used in conjunction with the output Neutral. Multi-motor applications should be supplied from the converter output via a three-phase radial or similar. Note that the output neutral is for control circuit loads only. It should not be connected to any single-phase inductive or resistive loads.

If the rotation of the driven machine is incorrect ensure that the converter phases marked L1 & L2 are changed for 415v phase – phase control circuitry. For 240 volt phase – neutral control circuitry, ensure that the phase to neutral supply is maintained and the other two phases reversed.

The motor starting current is limited to approximately three times the full load current of the motor. The starting characteristics of a three-phase motor supplied by a converter are similar in nature to Star/Delta starting on a three-phase system. Significant reductions in starting torque are experienced when compared with direct on line starting on a three-phase supply. For machinery supplied by a converter, direct-on-line starting is recommended. For machinery fitted with Star/Delta starters, the period in the star connection should be as short as possible to ensure a successful start.

6) An over temperature sensor protects the converter. If the converter trips out on over temperature, the output supply lamp should go off. The converter will not restart until it has sufficiently cooled. Checks should be carried out to ascertain why the converter has over heated, before starting.

NOTE - the output from a HUCOL converter cannot be compared directly to a mains three-phase electricity supply. The HUCOL converter offers an artificial means by which a three-phase motor (or motors) can be operated from a single-phase electricity supply. The HUCOL converter cannot be made to work equally on all motors, even though the horsepower, speed and voltage ratings are the same. Motors of differing manufacture and motors designed for differing applications vary considerably in their electrical characteristics. Therefore it is not always possible to make a universally applicable converter to operate a motor of given horsepower and rating. HUCOL converters are not designed for use in conjunction with continuous duty application. A purpose built model may be manufactured to suit this application.